



Network Horn Speaker H8115

Quick Installation Guide



Package List



H8115 Network Horn
Speaker (1 pcs)



Phoenix Connector 3-pin (1 pcs)
Phoenix Connector 2-pin (1 pcs)

 
 


Waterproof Kit (1 pcs)


► English ◀

Installation Method

- 1 According to the product dimension diagram (as shown below), first drill 3 M9 installation holes on the wall, with a center-to-center distance of 51mm between each hole, and then install expansion screws.

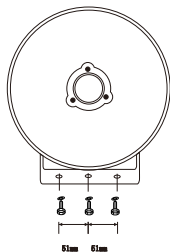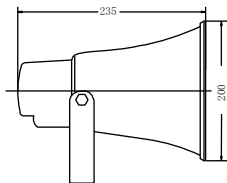

 
- 2 Align the holes on the product bracket with the pre-drilled expansion screws on the wall, then secure them with M9 nuts to fix the product to the wall.

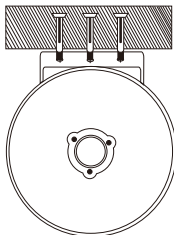

- 3 Connect the PoE+ cable or network cable, as well as the power supply.

Installation Angle

 
- 1 When adjusting the angle of the speaker, it is important to ensure that the speaker opening does not face upward or point straight down.
- 2 It is recommended to adjust the angle to approximately 60° downward.

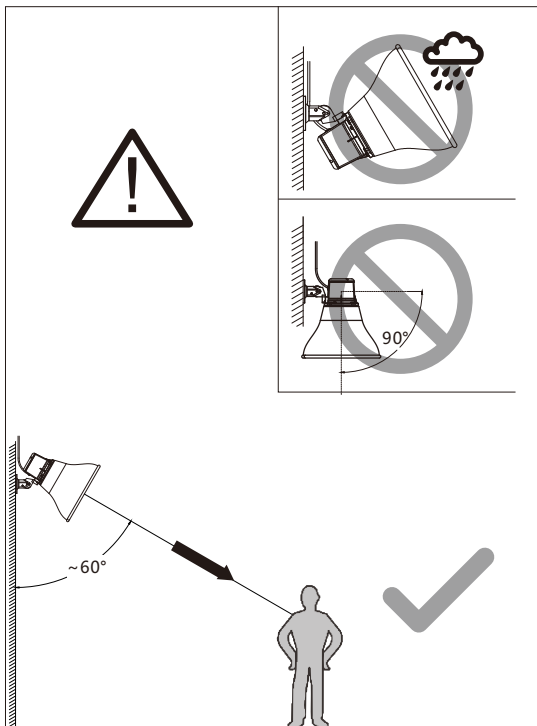

Network Settings

- 1 Connect the PoE+ cable or network cable and the power supply to the device, and wait for the device to start up.
- 2 Once the device has finished starting up, it will perform an IP broadcast.
- 3 By default, it uses DHCP. If the device does not obtain an IP address via DHCP, the default IP address will be 192.168.1.101.
- 4 To access the device's login interface, simply enter the device's IP address (either the IP address obtained via DHCP or the default IP address) into the address bar of your web browser.
- 5 The default username and password for the device are both "admin."

 Interfaces and Instructions

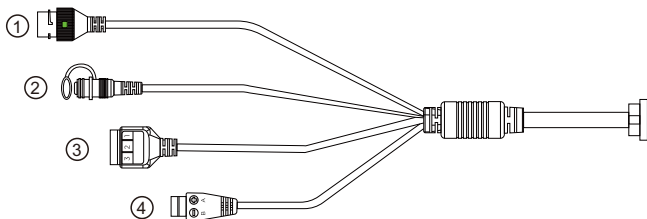


- ① Network Interface ② Power Adapter Interface ③ Dry Contact Interface
- ④ Digital Input Interface

Schematic diagram of wiring harness


► 中文 ◀

安装方式

 - 1 按照产品尺寸图（如下），在墙上先打3个M9安装孔，孔与孔之间的中心间距为51mm，打上膨胀螺丝。

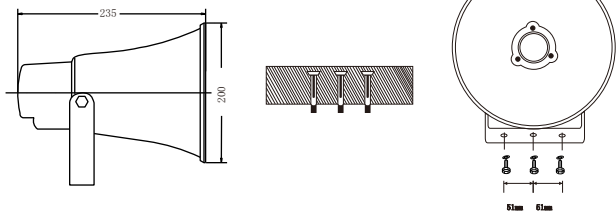

 
- 2 将产品支架上的孔对准墙上预先打好的膨胀螺丝，锁上M9螺母，将产品固定在墙上。

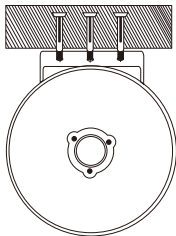

- 3 连接PoE+线或网线以及电源。

安装角度

 
- 1 调节喇叭角度时需要注意，喇叭口不可向上，不可垂直向下；
- 2 建议调节角度斜向下约 60° 。

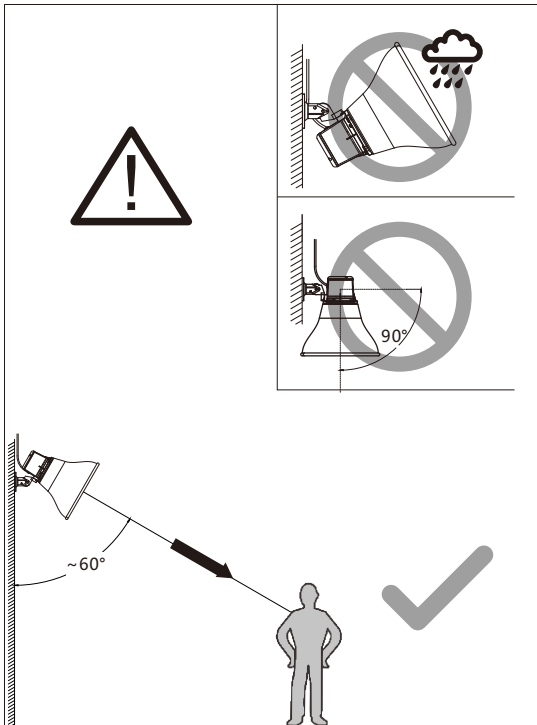

系统登录导向

- ① 将PoE+线或网线以及电源连接到设备上，等待设备启动。
- ② 设备启动完成后，设备进行IP播报。
- ③ 默认为 DHCP。如果设备未通过 DHCP 获取 IP 地址，则默认 IP 地址为 192.168.1.101。
- ④ 若要访问设备的登录界面，请直接在网络浏览器的地址栏中输入设备的 IP 地址（通过 DHCP 获取的 IP 地址或默认 IP 地址）。
- ⑤ 设备默认用户名和密码均为“admin”。

 接口和示意

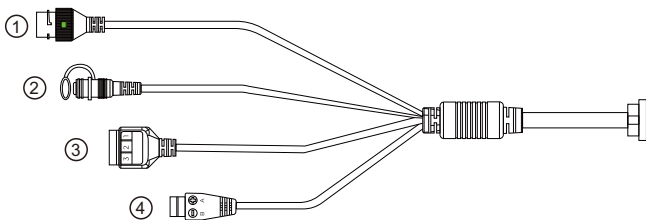

① 网络接口

② 电源适配器接口

③ 干接点接口

④ 开关量接口

线束示意图



OPA Co., Ltd

www.odmpa.com