



Network Column Speaker L8130

 
Quick Installation Guide



Package List



L8130 Network Column
Speaker (1 pcs)



14 AWG grounding wire
(1 pcs)



M8*12 bracket screws and
M8*20 washers(2 pcs)



Mounting Brackets (2 pcs)



Waterproof Connector
(1 pcs)

► English ◀

Network Settings

- 1 Connect the PoE+ cable or network cable and the power supply to the device, and wait for the device to start up.
- 2 Once the device has completed the startup, it will broadcast its IP address.
- 3 By default, it uses DHCP. If the device does not obtain an IP address through DHCP, the default IP address is 192.168.1.101.
- 4 Enter the device IP address in the address bar of browser to enter the device login interface.
- 5 The default username and password of the device are both "admin."

Mechanical Installation

- 1 Install the brackets on the column speaker with bracket screws and washers as shown below, then choose a suitable location on the vertical surface where the column speaker will be installed, and install two 8mm diameter screws to secure the column speaker in place.

 


- 2 When installing the brackets to the speaker column, connect one end of the grounding wire with the U-shaped terminal between the screw and the bracket, as shown in the diagram. Ensure that the other end of the grounding wire is connected to the ground and confirm that it is properly grounded.



- 3 Adjust the angle of the speaker column and check if the installation is secure and reliable. Also, verify that the grounding wire is properly connected to the ground and that there is a good ground connection.

Interface and Description

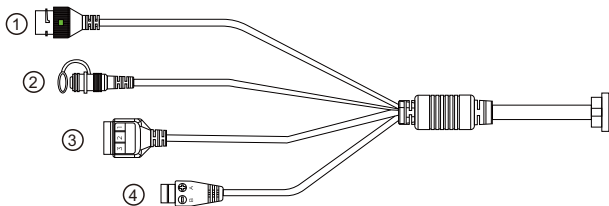

- ① Network Interface ② Power Interface ③ Dry Contact Interface
(1:NC; 2:NO; 3:COM)
- ④ Switch Quantity Interface

Schematic diagram of wiring harness

 
► 中文 ◀

系统登录导向

- 1 将PoE+线或网线以及电源连接到设备上，等待设备启动。
- 2 设备启动完成后，设备进行IP播报。
- 3 默认为 DHCP。如果设备未通过 DHCP 获取 IP 地址，则默认 IP 地址为 192.168.1.101。
- 4 若要访问设备的登录界面，请直接在网络浏览器的地址栏中输入设备的 IP 地址（通过 DHCP 获取的 IP 地址或默认 IP 地址）。
- 5 设备默认用户名和密码均为“admin”。

安装方式

- 1 在需安装音柱的立面选择合适位置安装两个直径8mm的螺丝，按下图装上支架，并固定音柱。

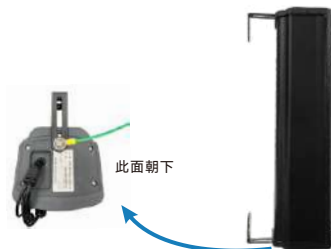


- ② 支架安装到音柱时，接地导线带U型端子的一端连接到螺丝与支架之间，如下图所示，接地导线的另一端接到大地，并确保与大地导通。



- ③ 调整音柱角度并检查安装是否牢固可靠，接地导线是否与大地导通。

 接口与说明

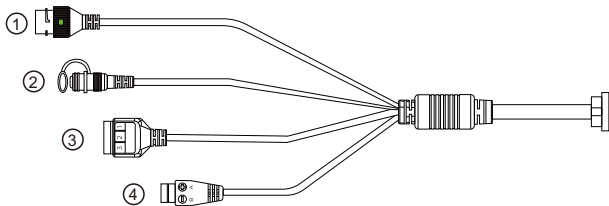

① 网络接口

② 电源接口

③ 干接点接口(1:NC; 2:NO; 3:COM)

④ 开关量接口

线束示意图



OPA Co., Ltd

www.odmpa.com