

 


# Network Dispatch Microphone Console **M8112**

## Quick Installation Guide



## Package List



M8112 Console (1 pcs)



Gooseneck Microphone+  
Dust Cover (1 pcs)



Power Adaptor  
(1pcs)



PoE Cable (1 pcs)



Static Stickers (5 pcs)



CD marker pen  
(2 pcs)


## ► English ◀

### Installation Method

The followings are the instructions for setting up the M8112 microphone. Please refer to the illustration and follow the simple steps below to quickly install the microphone.

**1** Install the gooseneck microphone stand


Insert the microphone stand accessory into the microphone head connection on the upper left corner, and tighten it clockwise.

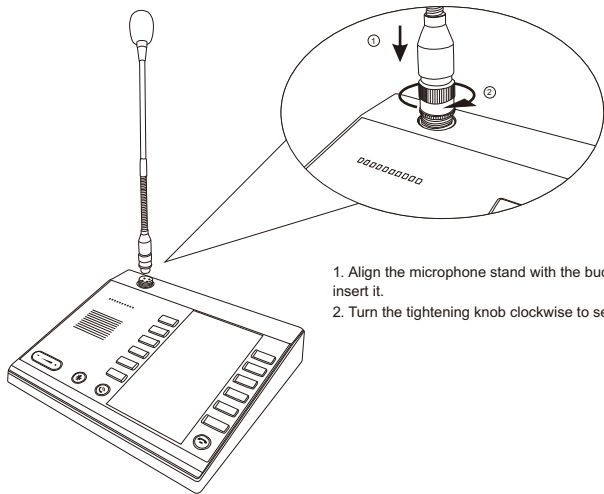

1. Align the microphone stand with the buckle and insert it.

2. Turn the tightening knob clockwise to secure it.


- ② Attach the provided static stickers to the recessed area on the device. You can use the marker to write labels on the stickers. In combination with the customizable button functions in the GUI, each button can be clearly labeled with its corresponding function for easier management and operation.

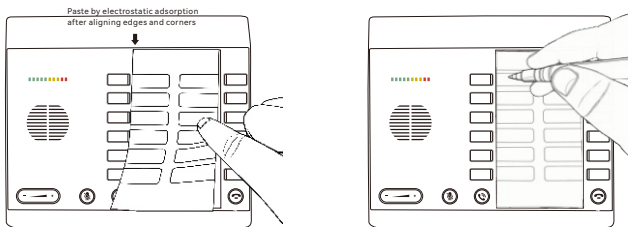

- ③ Install the TF card.(Optional)

Insert a TF card into the TF card slot on the rear panel of the microphone device.


Note: A TF card is not supplied with this product and must be provided by the user.

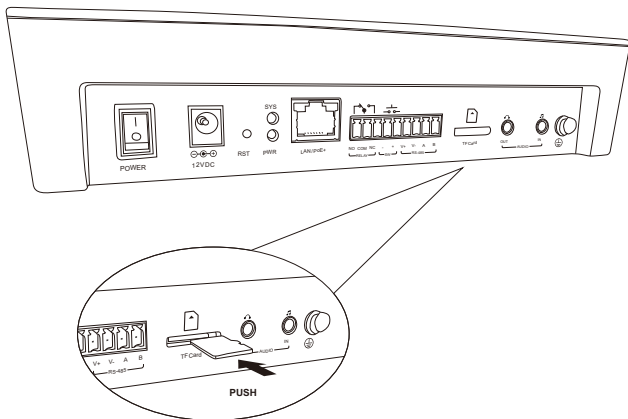

## System Configuration

- 1 Connect the power supply (or PoE cable) and the network cable to the device.
- 2 After the device has completed startup, press and hold the RST button for 5 seconds, then release it. The device will broadcast its IP address. By default, the device is set to DHCP mode. If no IP address is obtained, the default login IP address is 192.168.1.101. Enter the IP address in the web browser's address bar to access the device login page.
- 3 Press and hold the RST button for more than 10 seconds, then release it. A voice prompt will be played after release. The device will enter the reset state.

## Button Instructions

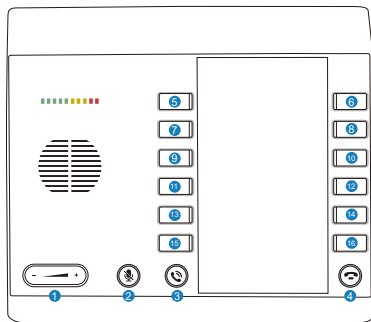

5 ~ 16

### Programmable Keys

Can be set as Function Keys/Speed Dial Keys/Paging Keys, etc.

#### 1 Volume Adjustment Key

In intercom mode: Increase or decrease the speaker volume.

#### 2 Mute Key


In call mode: Turn the call mute on or off.

#### 3 Dial Key

Answer and make calls.

#### 4 Hang-up key

Reject or end the call.

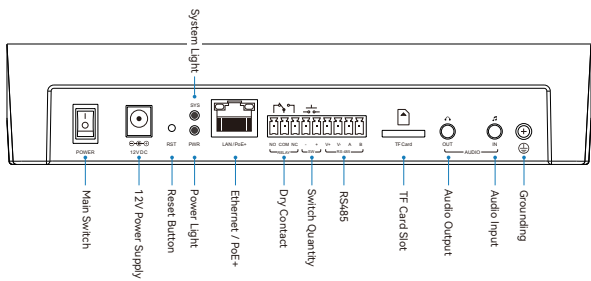


# ► 中文 ◀

## 安装方式

请按照下面图片中的说明安装M8112麦克风:


### ① 安装鹅颈麦咪杆

使用配件里的咪杆安插在麦克风设备左上角的咪头连接处，顺时针拧紧。

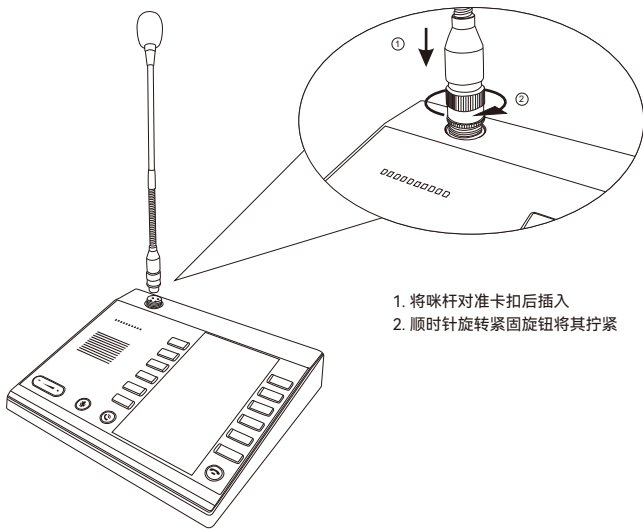

## ② 粘贴按键标识贴


将附赠的静电贴纸粘贴在设备的凹槽区域，并可使用油性记号笔在贴纸上标记文字。配合 GUI 界面中的自定义按键功能，可为每个按键添加相对应的功能标识，方便日常管理和操作。

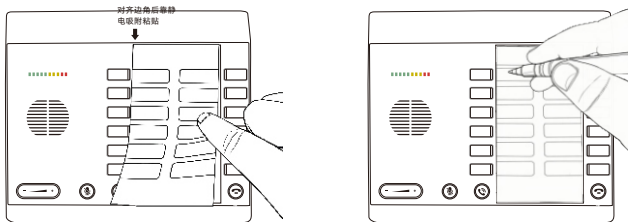

## ③ 安装TF内存卡

将 TF 卡插入麦克风设备后面板的 TF 卡插槽中。

注意：本产品不附带 TF 卡，需用户自行准备。

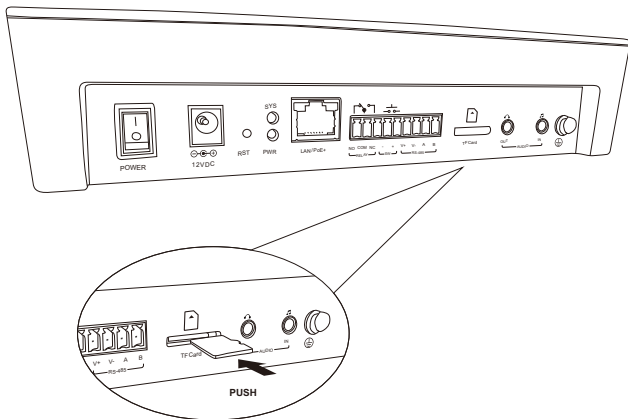




## 系统配置

- ① 连接好电源(或PoE)及网线。
- ② 设备启动完成后，按下恢复出厂设置按键5秒，松开按键，设备屏幕显示IP地址。出厂默认DHCP，若未获取到IP地址，则默认登录IP地址为192.168.1.101。直接在浏览器地址栏输入IP地址，即可进入设备登录界面，设备的缺省用户名及密码，均为admin。
- ③ 按住恢复出厂设置RST按钮10秒以上，松开后会播报语音。设备进入恢复设置状态。

## 按键功能

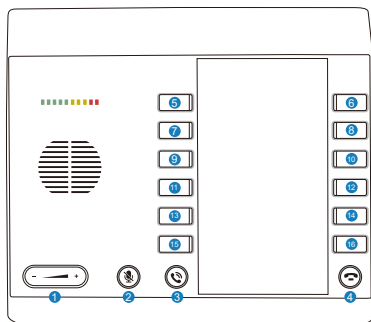

5 ~ 16

### 可编程键

可设置为功能键/速拨键/喊话键等

### ① 音量调节键

增大或减小扬声器音量。

### ② 静音键


开启或关闭静音。

### ③ 拨号键

接听通话。

### ④ 挂机键

拒绝或结束通话。

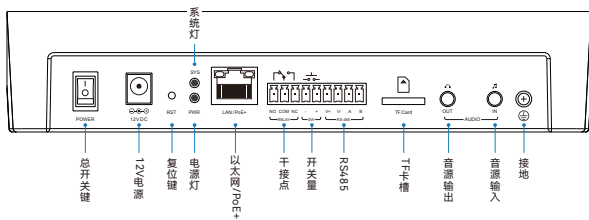



**OPA Co., Ltd**

---

[www.odmpa.com](http://www.odmpa.com)