



Dante Cabinet Speaker W8215D

Quick Installation Guide



Package List



W8215D Dante Cabinet
Speaker (1 pcs)


► English ◀

Installation Method

- 1 Use tools to drill a mounting round hole with a spacing of 143mm in the wall, and drive in expansion screws.




- 1 Connect the PoE+ cable or network cable and the power supply to the device.
- 2 If you are using external devices, please connect them at this stage.
- 3 Fix the speaker bracket to the wall with screws, then secure the speaker to the bracket and tighten the locking clips.
- 4 Ensure the device is installed correctly and is firmly and reliably fixed.

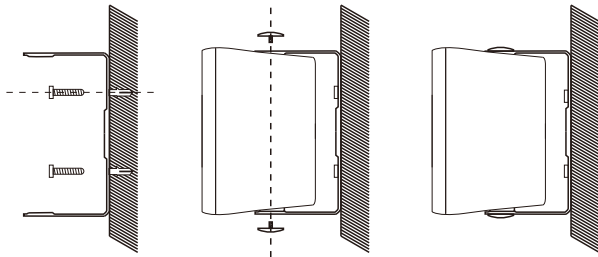

Network Settings

- 1 Connect the PoE+ cable or Ethernet cable and the power supply to the device, and wait for the device to start up.
- 2 Once the device has finished starting, it will broadcast its IP address.
- 3 By default, it is set to DHCP; if the device does not obtain an IP address through DHCP, the default IP address will be 192.168.1.101.
- 4 Enter the device IP address in the address bar of browser to enter the device login interface.
- 5 The default username and password for the device are both "admin."

Interfaces and Instructions

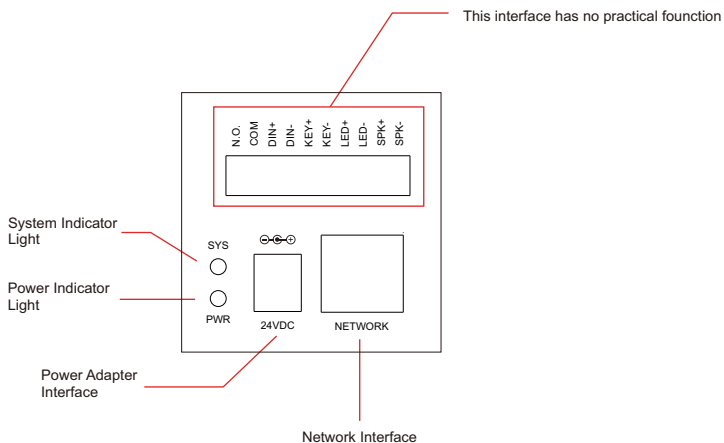


► 中文 ◀

安装方式

- ① 用工具在墙壁上开一个间距为143mm的安装圆孔，打入膨胀螺丝。




- ① 将 PoE+ 线或网线以及电源连接到设备上。
- ② 如果您有使用外接设备，请在此时连接它们。
- ③ 使用螺丝将音箱支架固定在墙上，随后将音箱固定在音箱支架上拧紧卡扣。
- ④ 确保设备安装到位并且牢固可靠。

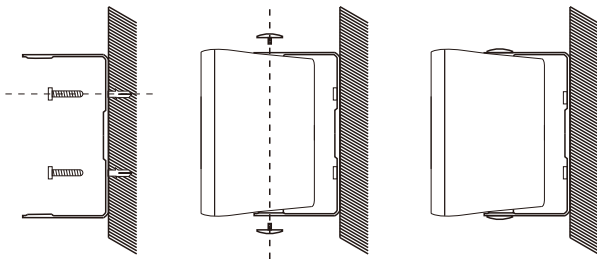

系统登录导向

- 1 将PoE+线或网线以及电源连接到设备上，等待设备启动。
- 2 设备启动完成后，设备进行IP播报。
- 3 默认为 DHCP，如果设备未通过 DHCP 获取 IP 地址，则默认 IP 地址为 192.168.1.101。
- 4 若要访问设备的登录界面，请直接在网络浏览器的地址栏中输入设备的 IP 地址（通过 DHCP 获取的 IP 地址或默认 IP 地址）。
- 5 设备默认用户名和密码均为“admin”。

接口和说明

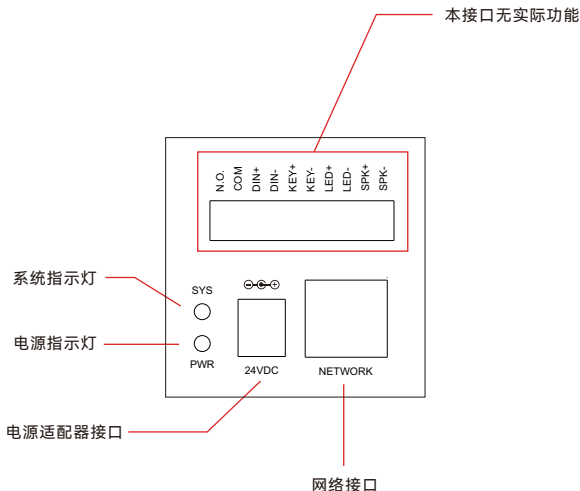



OPA Co., Ltd

www.odmpa.com